

KASTE

PŘEVODOVKY



CELKOVÉ A INSTALAČNÍ ROZMĚRY PŘEVODOVEK




Distributor v ČR
VERAN s.r.o.
Moravská 352




Maloobchod: Čs. Armády 159, Chrudim
tel.: 603 582 618, 739 708 050
www.levne-elektromotory.cz

INSTALAČNÍ ROZMĚRY


030

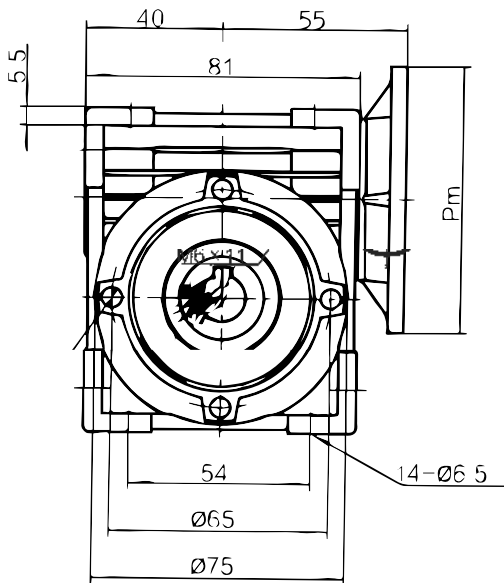

	Pm	Dm	bm	tm
56B5	120	9	3	10,4
56B14	80			
63B5	140	11	4	12,8
63B14	90			

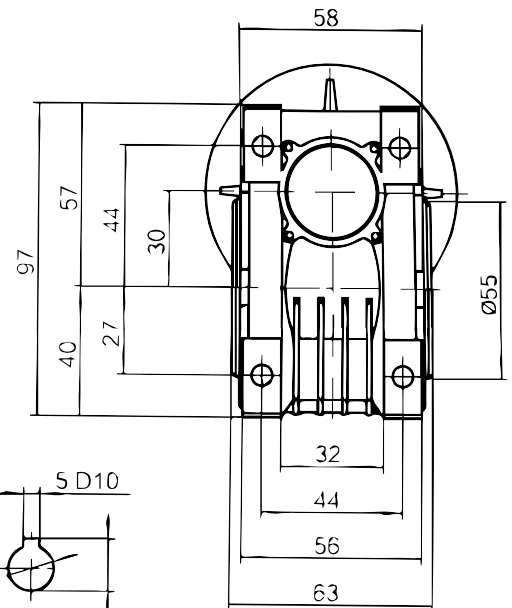
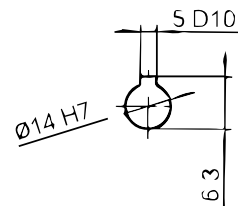
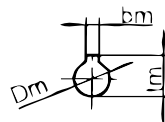


040

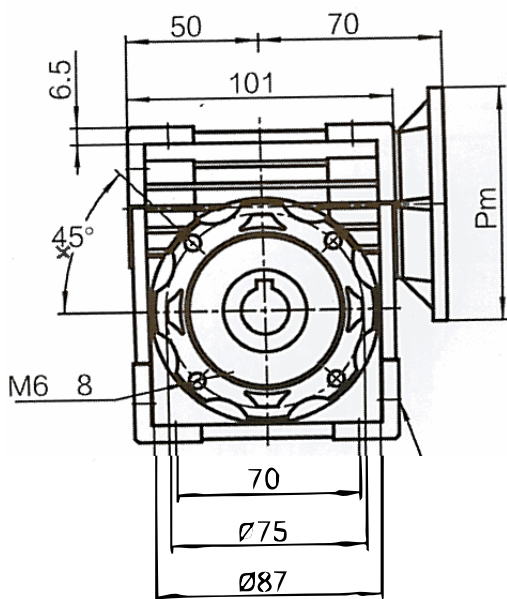


	Pm	Dm	bm	tm
56B5	120	9	3	10,3
63B5	140	11	4	12,8
63B14	90			
71B5	160	14	5	16,3
71B14	105			

Rozměr výstupní hřídele		
D H7	b D10	t
18	6	20,8
(19)	(6)	(21,8)

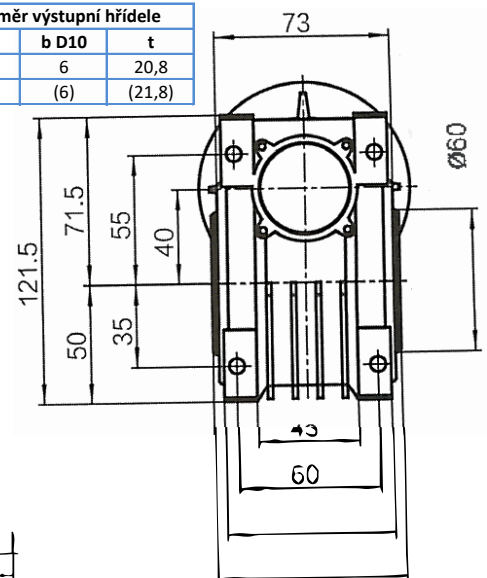  


INSTALAČNÍ ROZMĚRY


050

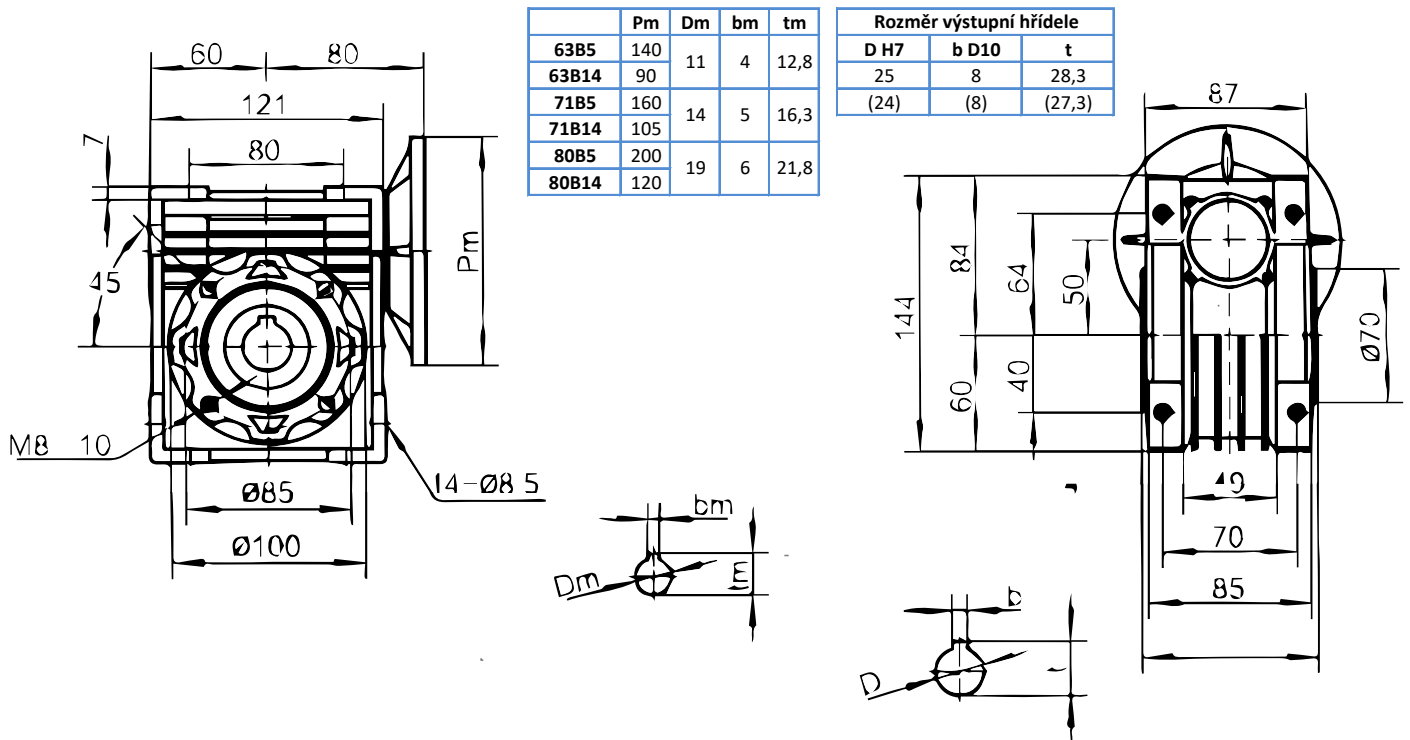

063

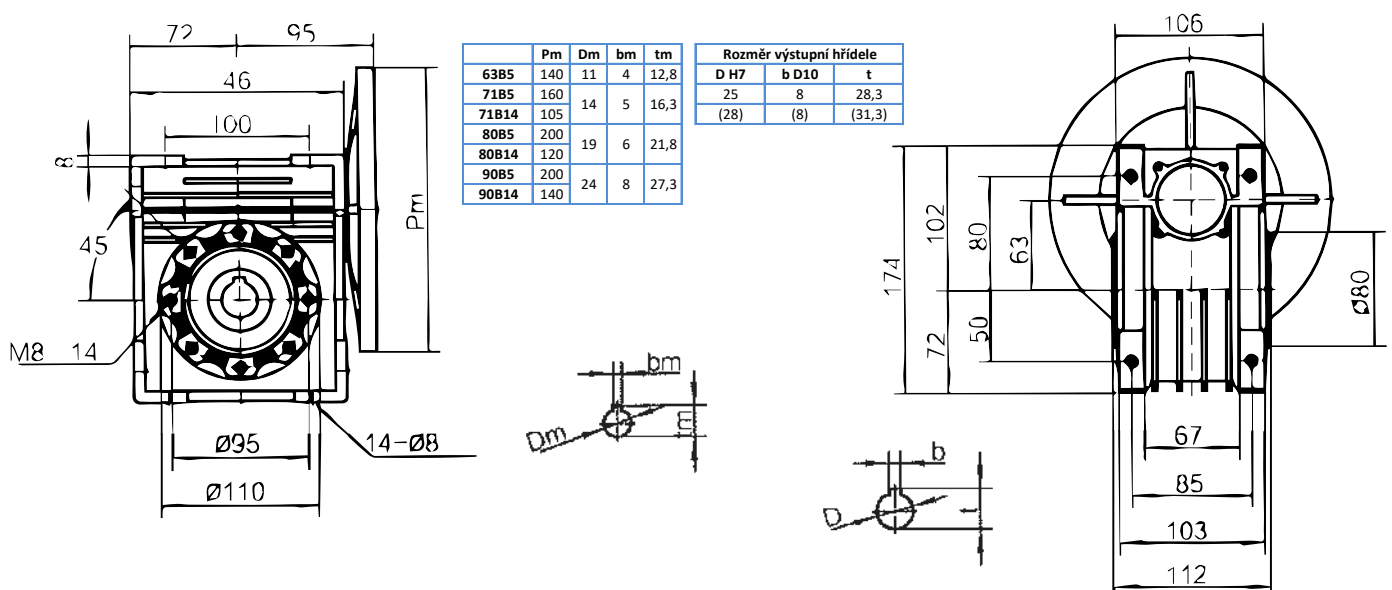

ČELNÍ PŘEVODOVKY

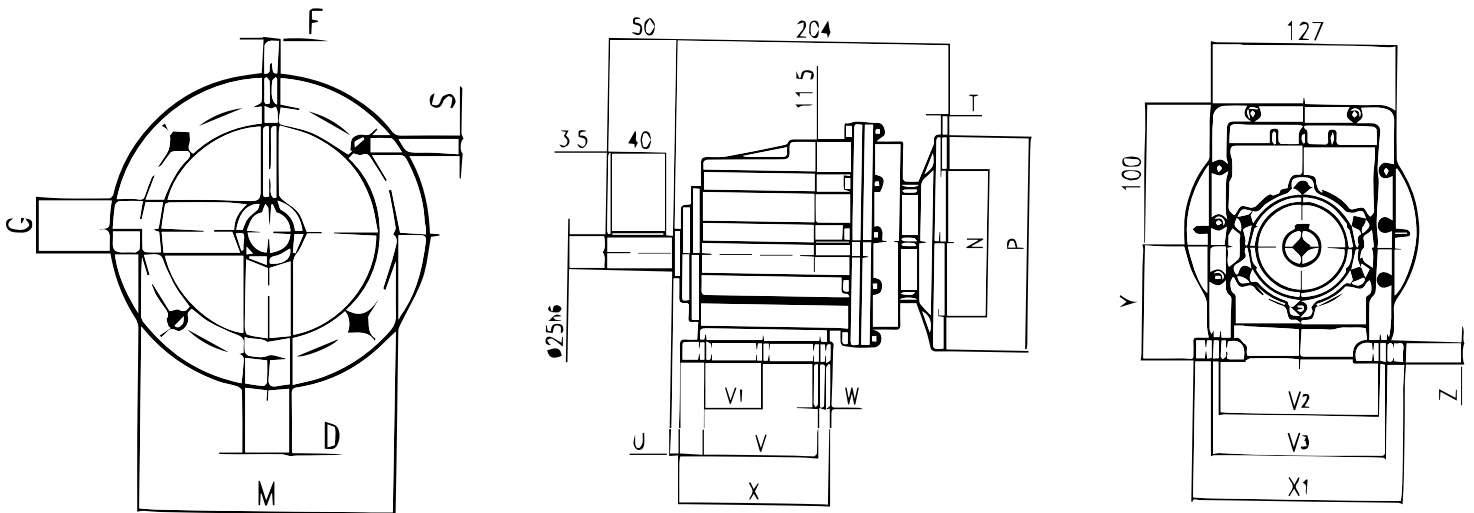

IEC	D	F	G	P	M	N	S	T
63B5	11	4	12,8	140	115	95	9	4
71B5	14	5	16,3	160	130	110	9	4
71B14	14	5	16,3	105	85	70	7	4
80B5	19	6	21,8	200	165	130	11	4
80B14	19	6	21,8	120	100	80	7	4
90B5	24	8	27,3	200	165	130	11	4
90B14	24	8	27,3	140	115	95	9	4

Rozměr patek	U	V	V1	V2	V3	W	X	X1	Y	Z
B02	18	107,5	60	-	130	11	136	155	100	17
M02	25	85	-	110	120	9	112	145	80	15
M01	18	80	-	110	120	9	118	145	80	15
B01	18	87	50	110	-	9	118	130	90	15

